

DESIGN	E LTD		
CHECKED	APPROVED	DRAWING NO.	REV. A
H	-	DSI 9224	SHEET 1 OF 1
DATE		TITLE	SCALE
01.11.21		CROSSTUBE SUPPORTS	
Α	01.11.21	NEW ISSUE	


DART SERVICE INSTRUCTION

D205-594 Rev.D to Rev.G

IT IS ACCEPTABLE TO SUBSTITUTE DART SUPPORTS FOR BHT SUPPORTS AS FOLLOWS:

DWG CALLS UP	REPLACE WITH	
(2) 205-050-132-001 SUPPORT (2) 205-050-133-001 SUPPORT (4) 205-050-134-001 U-BOLT (8) MS21042L4 NUT (8) AN960JD416 WASHER	(2) D2893-1 SUPPORT (4) MS21920-24 CLAMP (2) D2856-600-851 ABRASION STRIP	
(2) 205-050-132-003 SUPPORT (2) 205-050-133-003 SUPPORT (4) 205-050-134-003 U-BOLT (8) MS21042L4 NUT (8) AN960JD416 WASHER	(2) D2940-1 SUPPORT (4) MS21920-28 CLAMP (2) D2856-600-1009 ABRASION STRIP	

INSTALL DART SUPPORTS AS FOLLOWS:

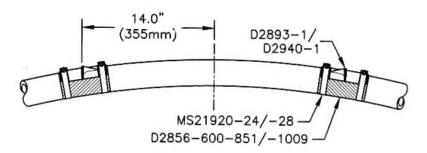

CROSSTUBES WITH DART SUPPORTS SHOULD BE IDENTIFIED AS FOLLOWS:

DESC.	CROSSTUBE ASSEMBLY P/N	CROSSTUBE P/N	SUPPORTS P/N
FWD	D205-596-101	D205-596-001	(2) D2893-1 SUPPORT
CROSSTUBE	D205-596-105	D205-596-005	(4) MS21920-24 CLAMP
- CHOOCHODE	D205-596-109	D205-596-009	(2) D2856-600-851 ABRASION STRIP
AFT	D205-596-103	D205-596-003	(2) D2940-1 SUPPORT
CROSSTUBE	D205-596-107	D205-596-007	(4) MS21920-28 CLAMP
CHOCOTOBE	D205-596-111	D205-596-011	(2) D2856-600-1009 ABRASION STRIP